

XTOOL | SafetyPro™ AP2 Max

Quick Start Guide



Contents

List of items ----- 01

Meet xTool SafetyPro™ AP2 Max ----- 02

 
Install xTool SafetyPro™ AP2 Max ----- 05

Use xTool SafetyPro™ AP2 Max ----- 14


Use with xTool software ----- 15

Maintenance ----- 16


List of items

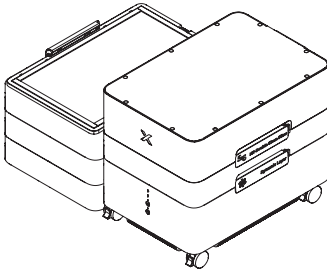


xTool SafetyPro™ AP2 Max

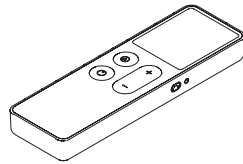 


Remote control

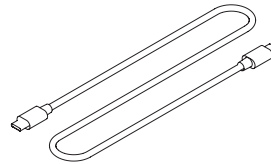 


Charging cable for the remote control

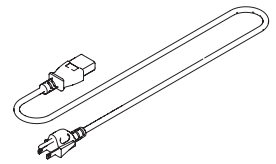 


Power cable

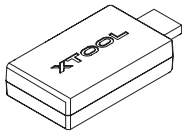 


Bluetooth dongle

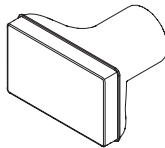 


Airflow inlet connector

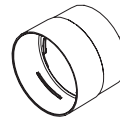 

Pipe connector 1

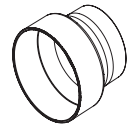 


Pipe connector 2

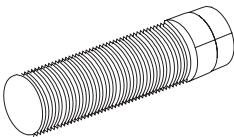 

Smoke exhaust pipe



 
Pipe clamp

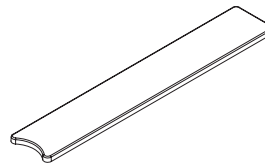

NFC baseplate



 Quick start guide

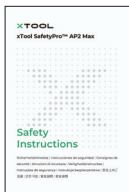

Safety instructions

 
Note:

 


- The power cable varies according to the region in which the product is delivered.
- Pipe connector 1 is compatible with xTool devices' rigid, shape-adjustable exhaust pipes with a diameter of 80 mm.
- Pipe connector 2 is compatible with xTool devices' rigid, shape-adjustable exhaust pipes with a diameter of 65 mm.


Meet xTool SafetyPro™ AP2 Max

AP2 Max

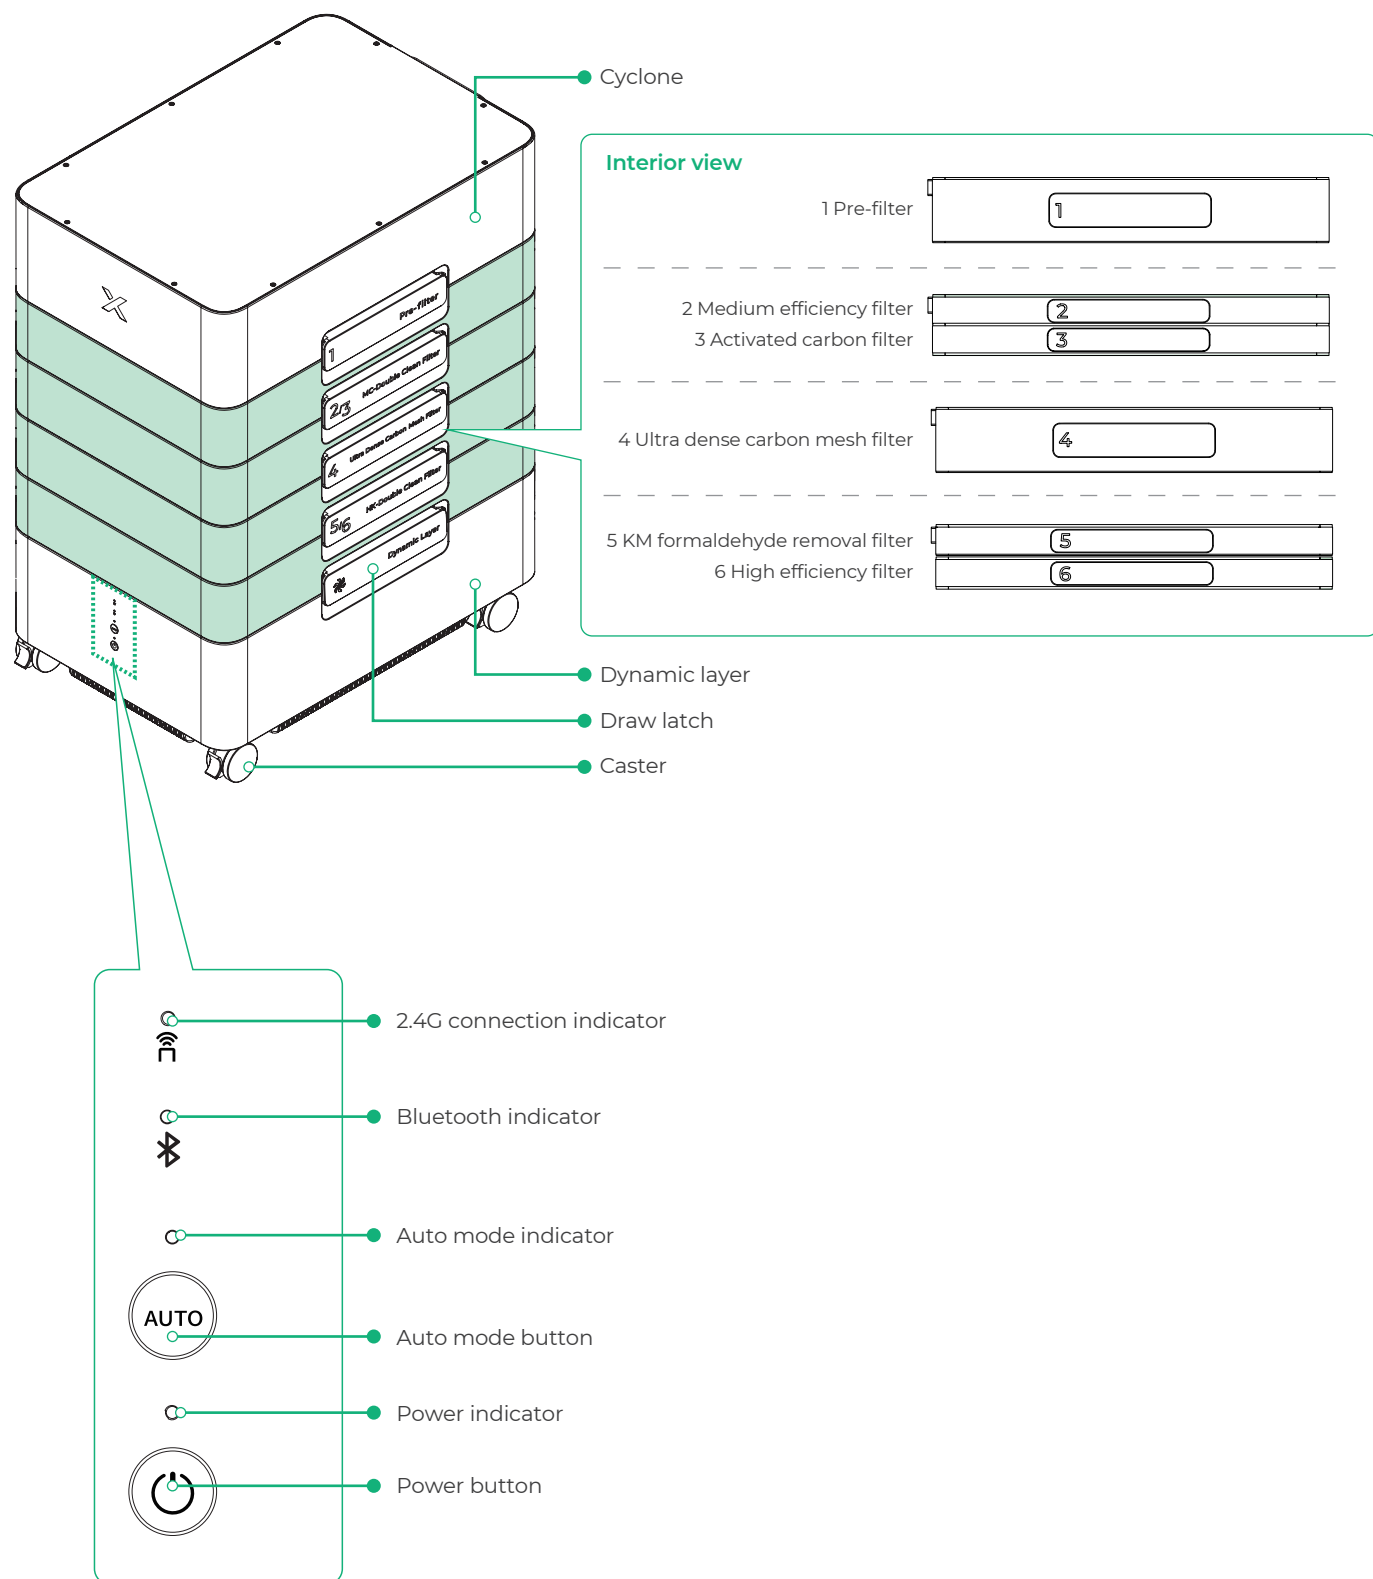

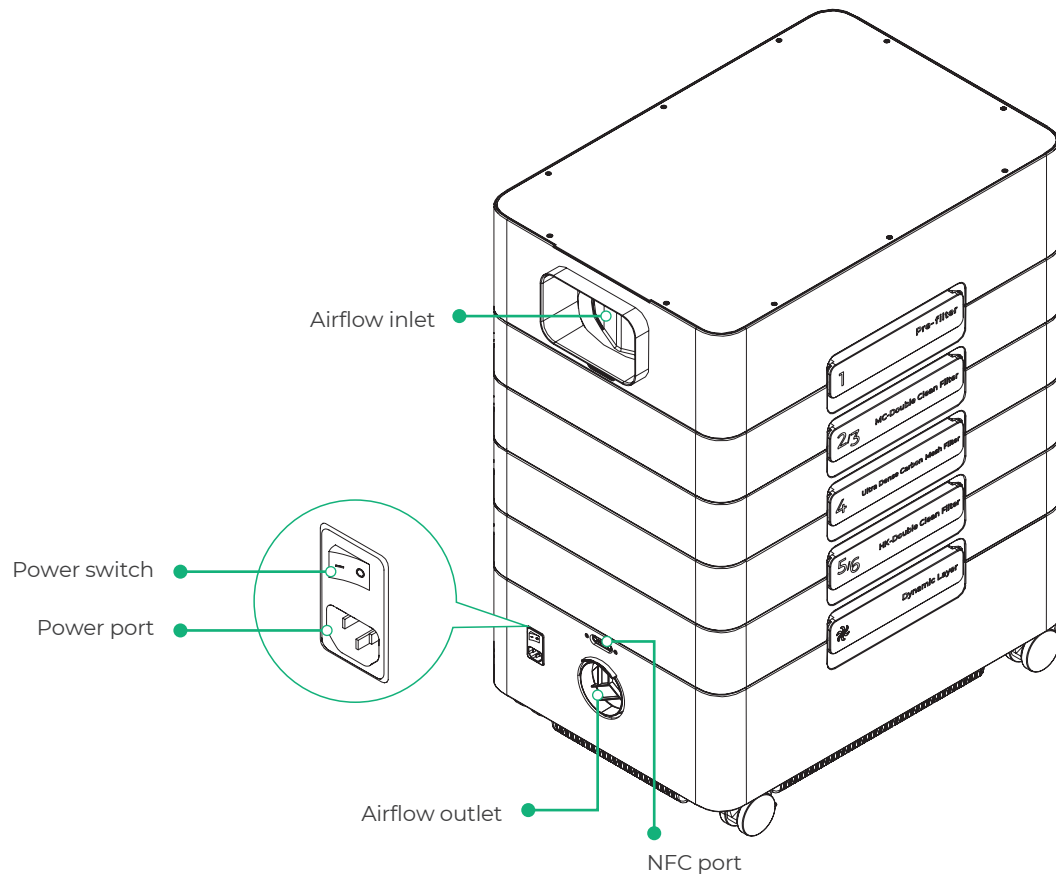

Remote control

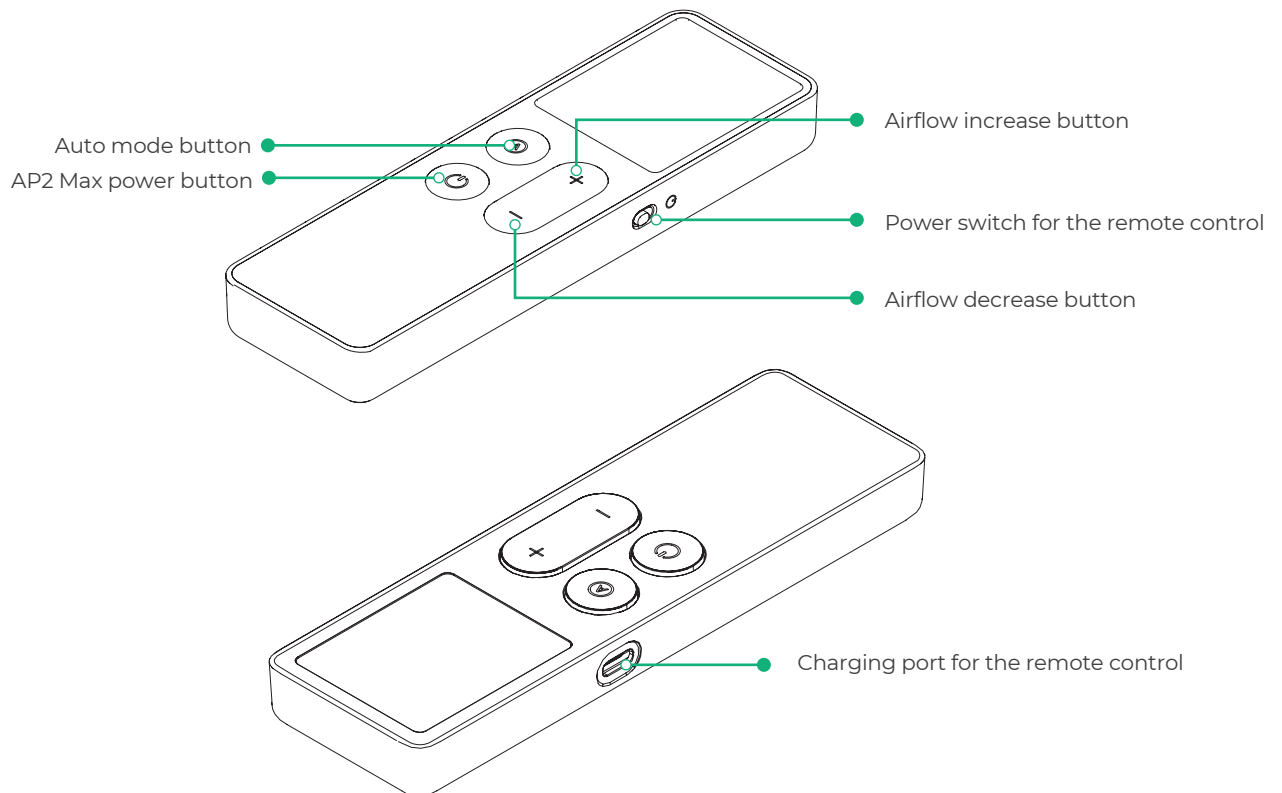 

AP2 Max indicators description

Indicator	Indicator status	Device status
 2.4G connection indicator	Blinking blue	The remote control enters pairing mode.
	Solid blue	The remote control has been connected to AP2 Max.
 Bluetooth indicator	Blinking blue	AP2 Max is waiting to connect to the laser device.
	Solid blue	AP2 Max has been connected to the laser device.
 Auto mode indicator	Solid blue	AP2 Max is working in auto mode.
	Off	AP2 Max is working in manual mode.
 Power indicator	Solid blue	AP2 Max has been powered on.

Remote control screen

Indicator icon	Indicator status	Description
 Remote control battery	Solid green	Screen on/Power sufficient
	Blinking green	Charging
	Solid red	Battery power below 25%
	Off	Power depleted/Screen off
 Bluetooth connection status	Blinking green	AP2 Max is waiting to connect to the laser device.
	Solid green	AP2 Max has been connected to the laser device.
	Off	AP2 Max is not connected to the laser device.
 Remote control connection status	Blinking green	The remote control is pairing with AP2 Max.
	Solid green	The remote control has been connected to AP2 Max.
	Off	The remote control is not connected to AP2 Max.
 AP2 Max power status	Solid green	AP2 Max has been powered on.
	Off	AP2 Max is not powered on.
 Fault indicator	Solid red	AP2 Max malfunctions.
	Off	AP2 Max is working properly.
 Auto mode display	Solid green	AP2 Max is working in auto mode.
	Off	AP2 Max is working in manual mode.
 Airflow volume (%)	Solid green (value range: 1-100)	AP2 Max is in manual mode, and the value is the current airflow volume.
Filter indicator 	Solid green	The corresponding filter is normal.
	Blinking green	The corresponding filter's life is low ($\leq 30\%$) and needs to be replaced.
	Off	The corresponding filter is missing.

 
Install xTool SafetyPro™ AP2 Max

1 Install the filters


(1) Release the draw latches.




Caution: When releasing the draw latches, do not place your hand in the gap to avoid injury.

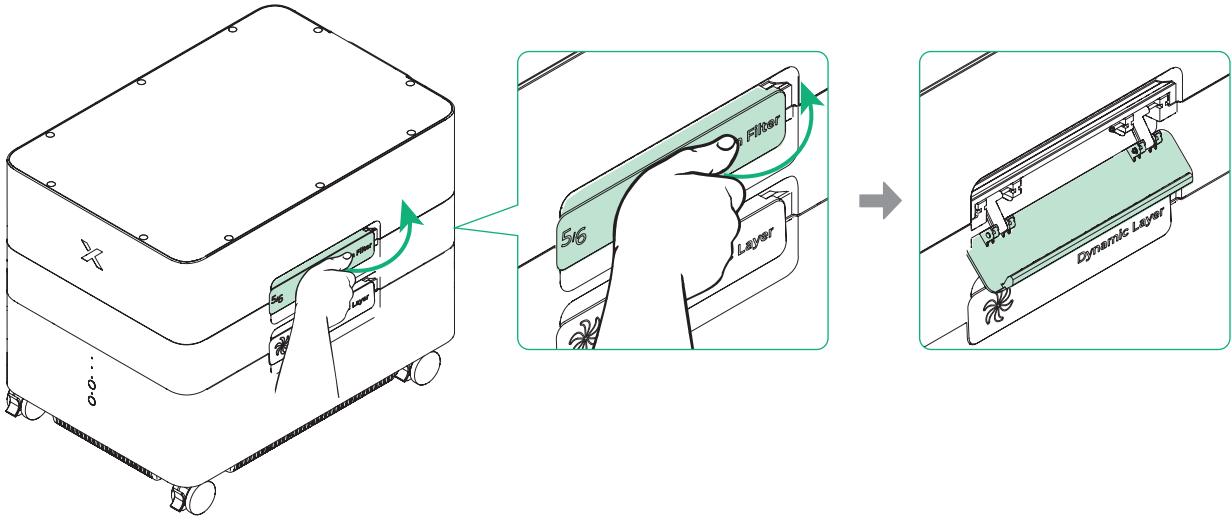

 
(2) Take the cyclone down.

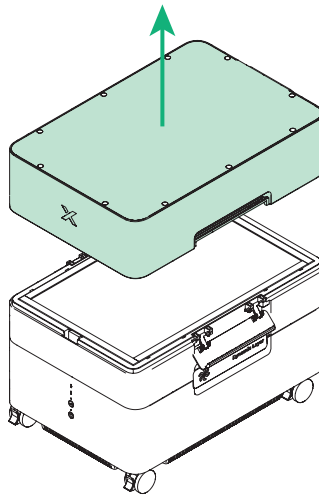

 (3) Take the filters out.

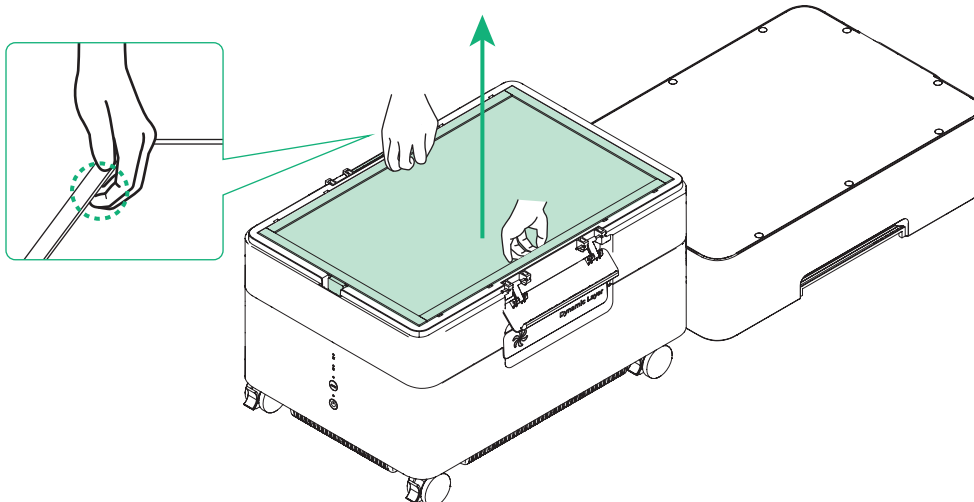

 
(4) Remove the plastic bags from the filters.

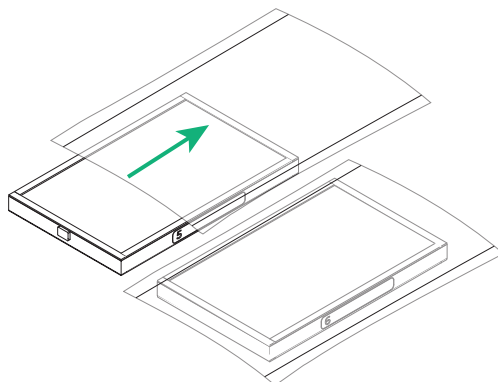


(5) Put the filters back.



 
Install the filters with texts upright and NFC label facing the rear access (power/air inlet/outlet side).

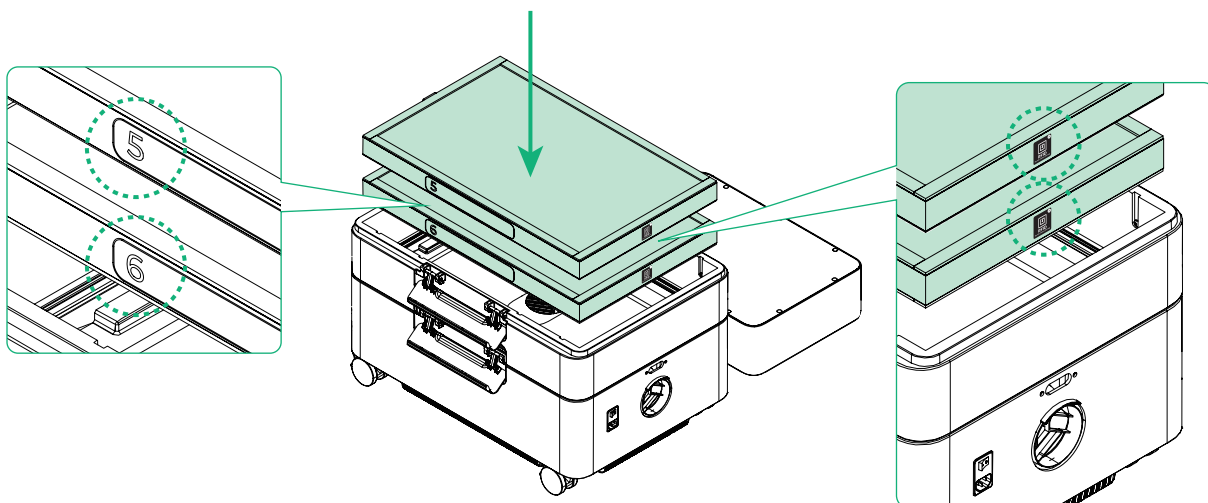

 
(6) Repeat steps 1 to 5 to prepare the other four filters.

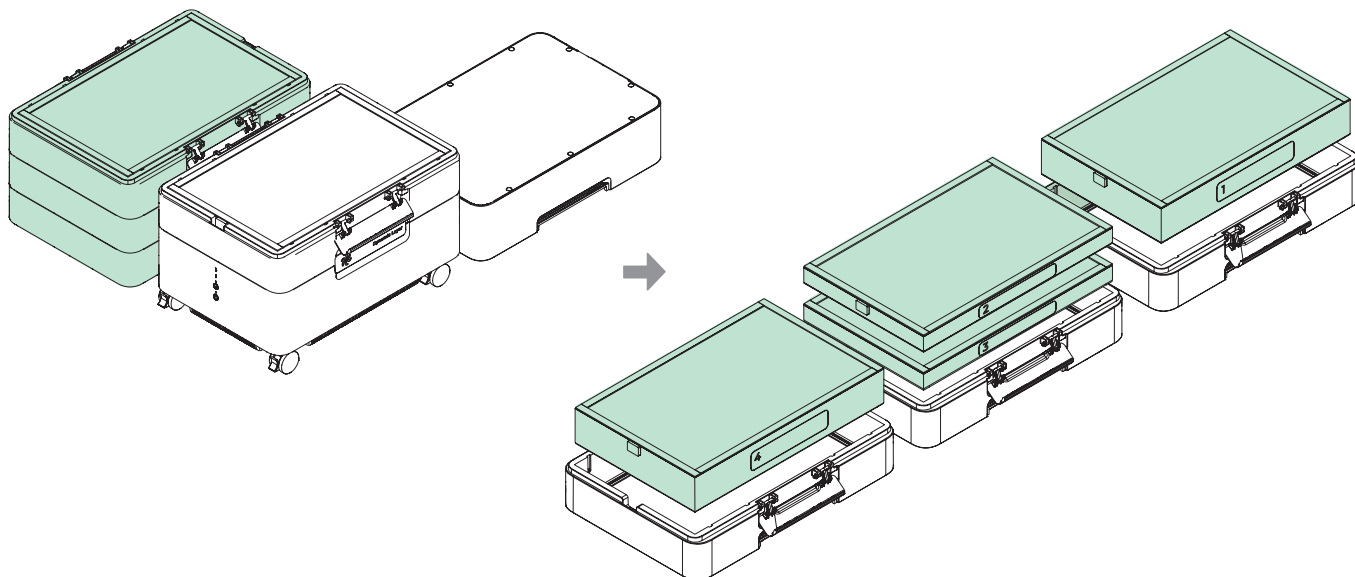



 
(7) Stack the cyclone and filters according to the illustrated sequence.

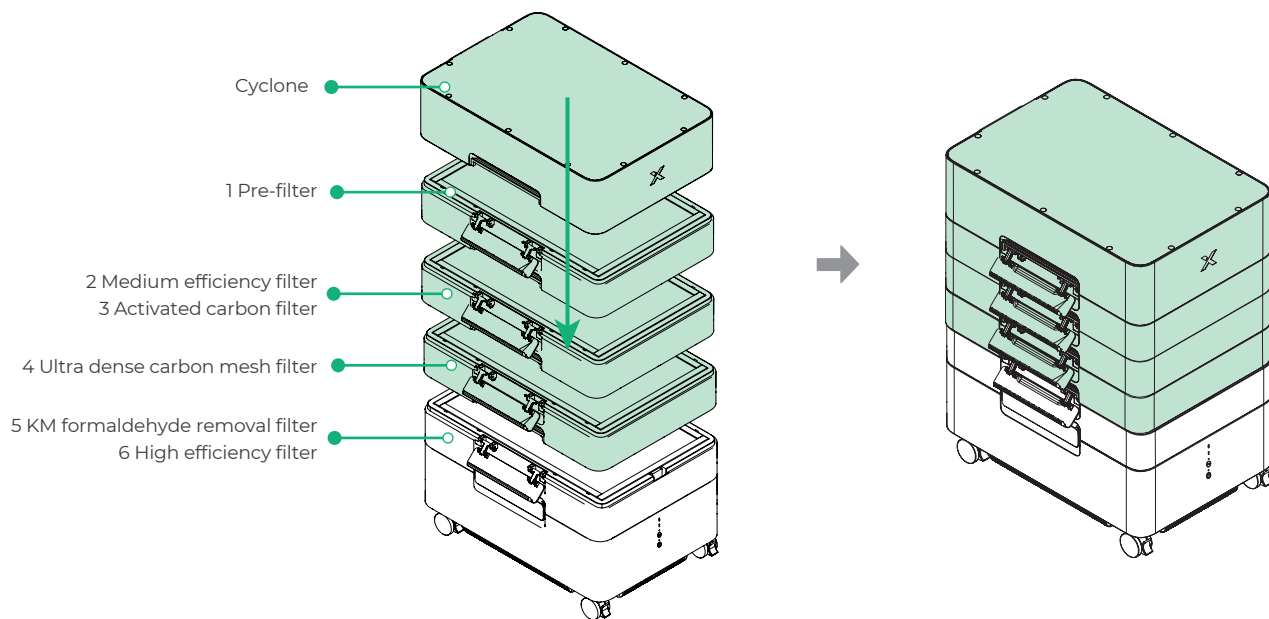

 (8) Lock all draw latches.


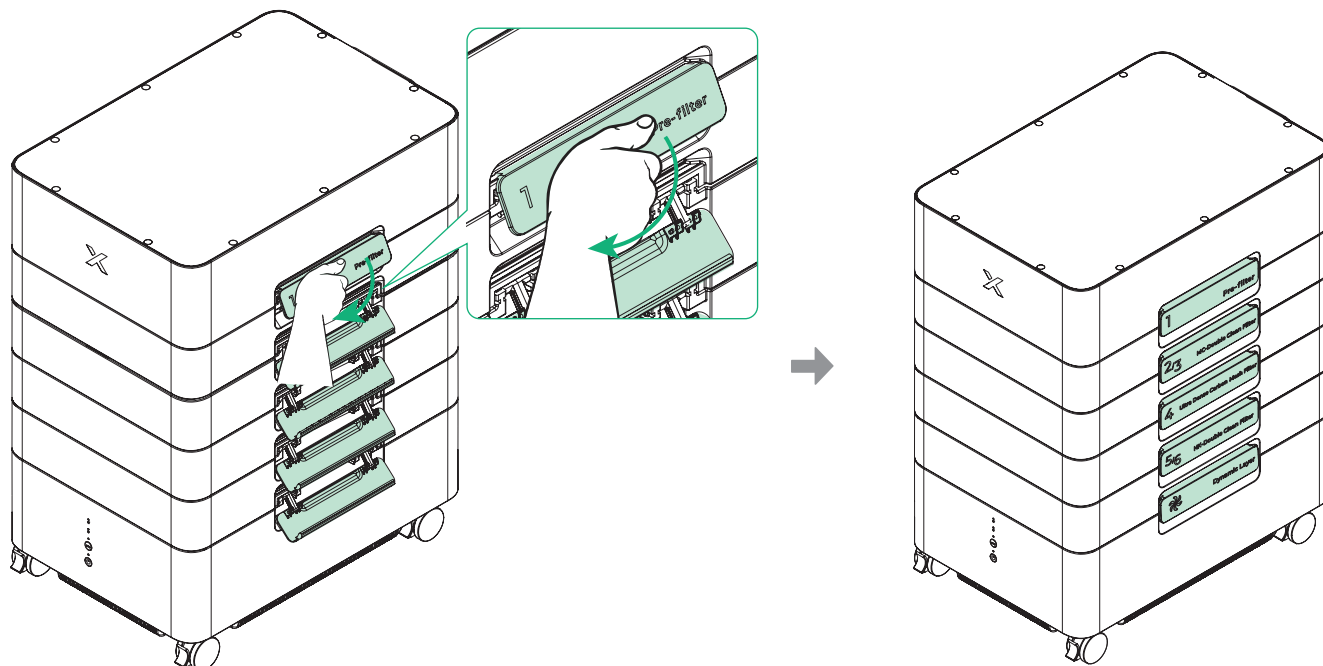


2 Install the NFC baseplate

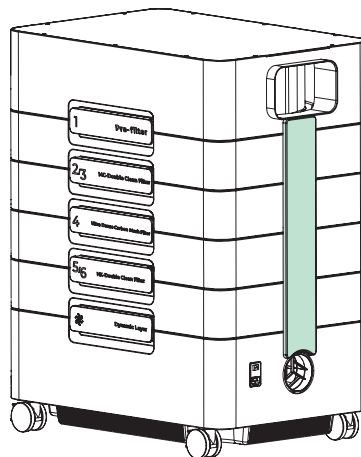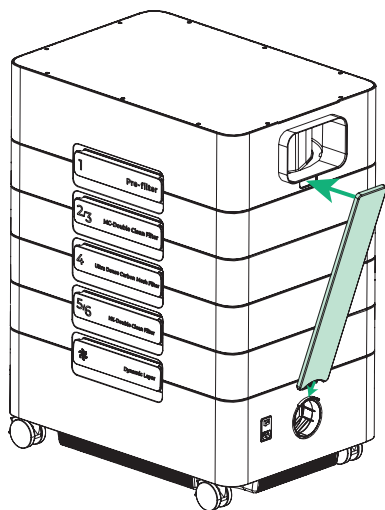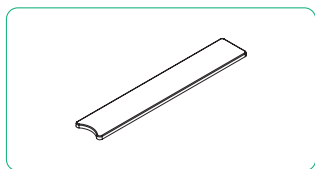   

3 Place AP2 Max at the desired location

  Unlock the casters, move AP2 Max to the desired location, and then lock the casters.

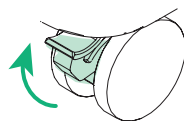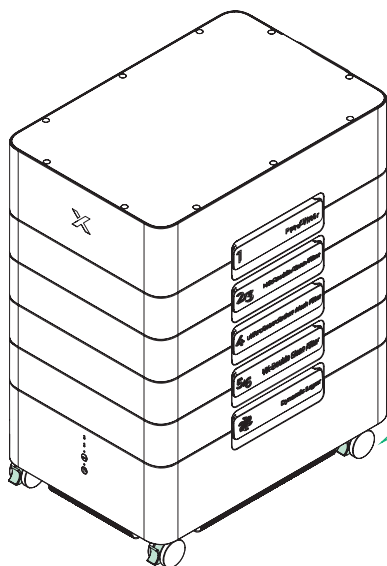

Brake pedal up: AP2 Max is movable.

 


Brake pedal down: AP2 Max is fixed.


4 Connect the exhaust pipe of the laser device

(1) Use the exhaust pipe connector to connect the airflow inlet connector and the device's exhaust pipe.


■ Scenario 1

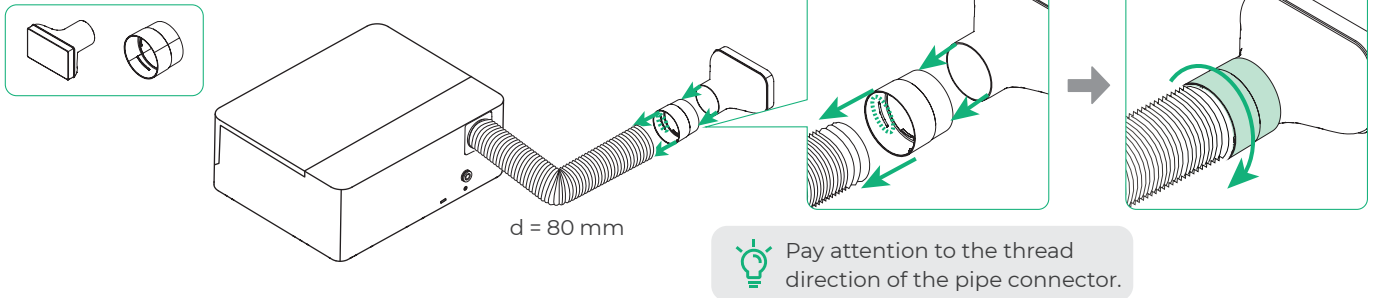


■ Scenario 2

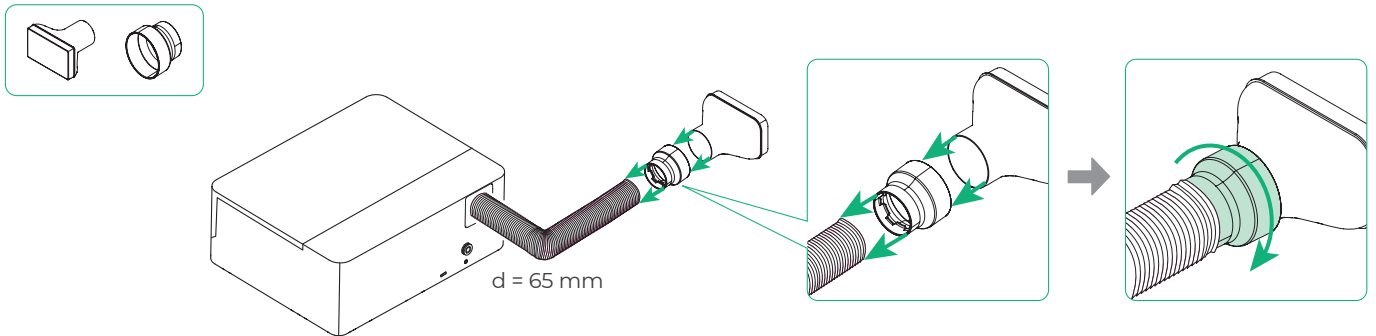 

■ Scenario 3


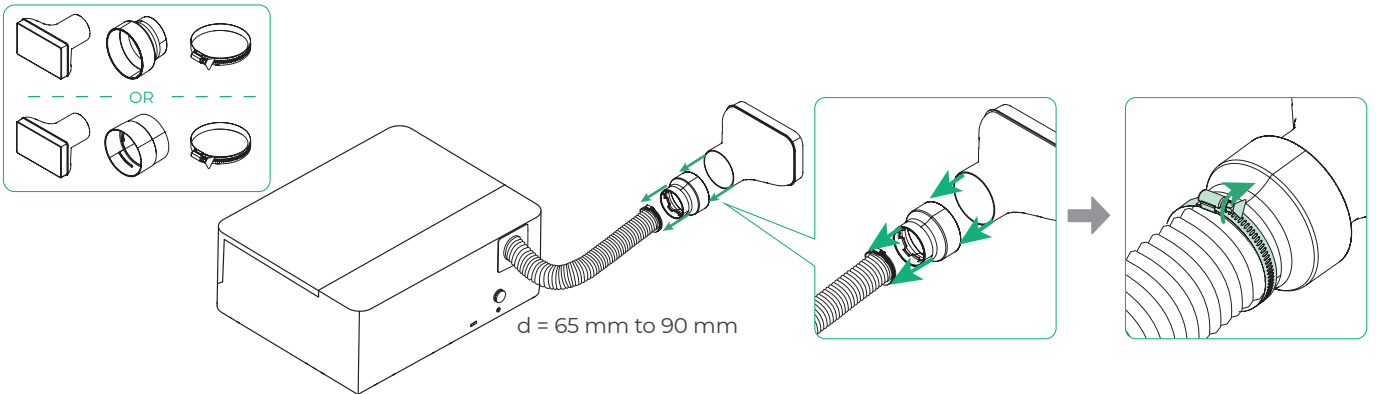 


■ Scenario 4


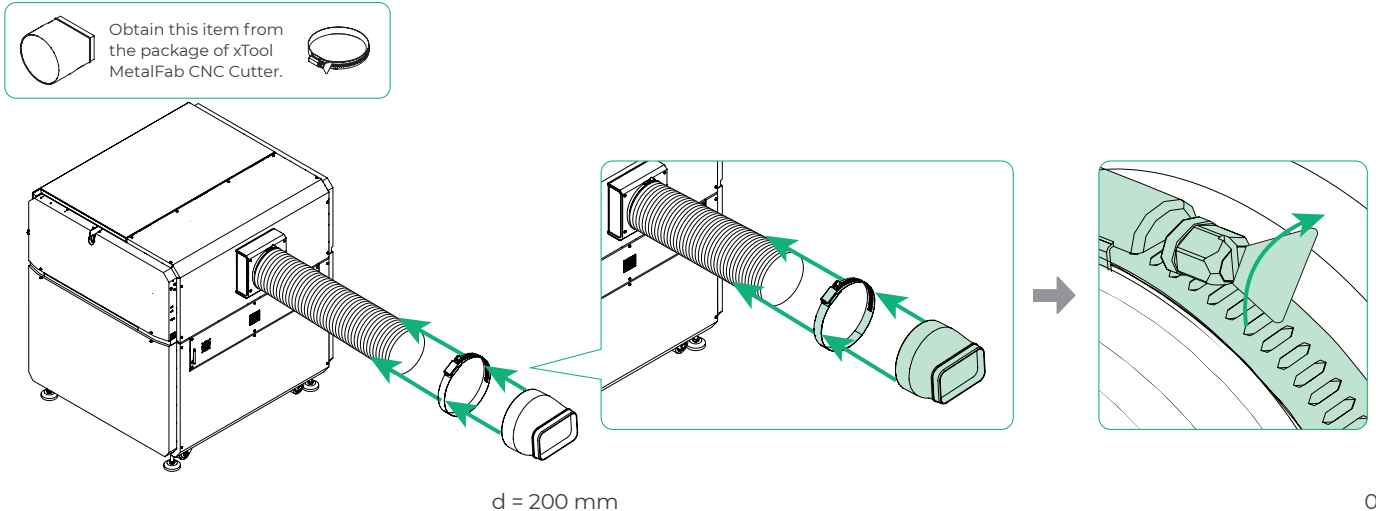 


(2) Connect the device exhaust pipe to the air inlet of AP2 Max.

 
 
■ Scenario 1

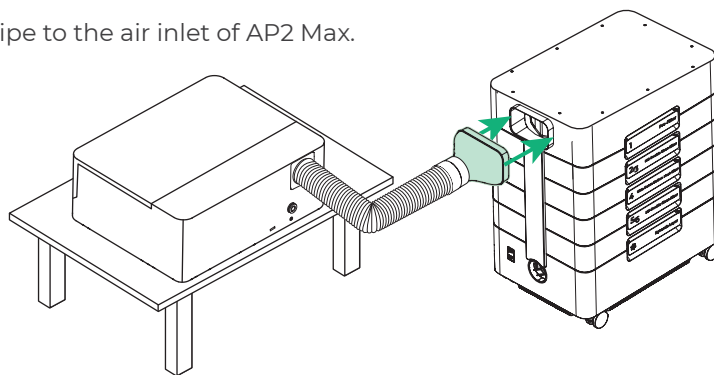



■ Scenario 2

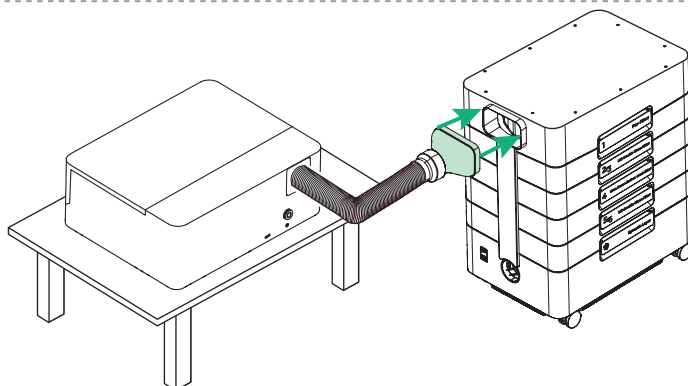  

■ Scenario 3

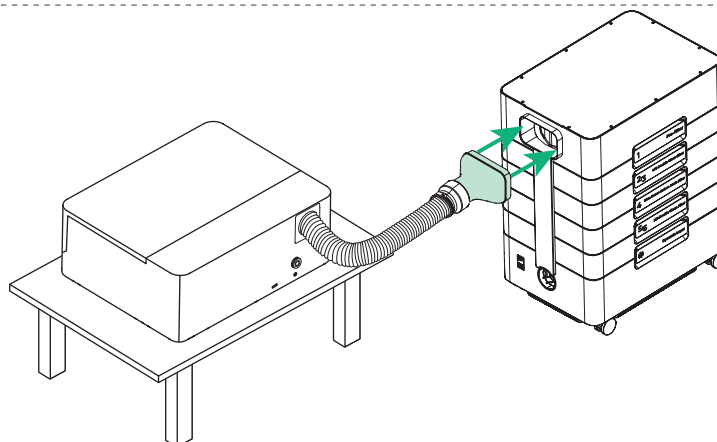 
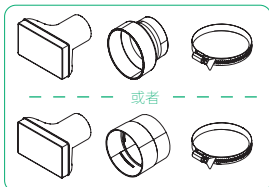 


■ Scenario 4


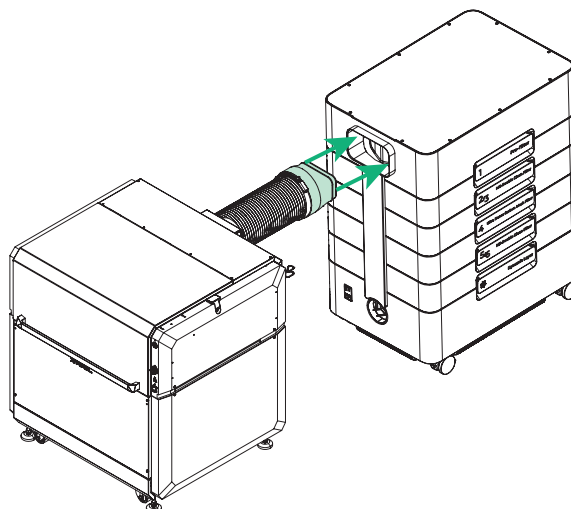 
 


Subsequent steps: The operating steps are the same for different accessory combinations. This manual uses exhaust pipe connector 1 as an example.

  5 Connect the exhaust pipe of AP2 Max

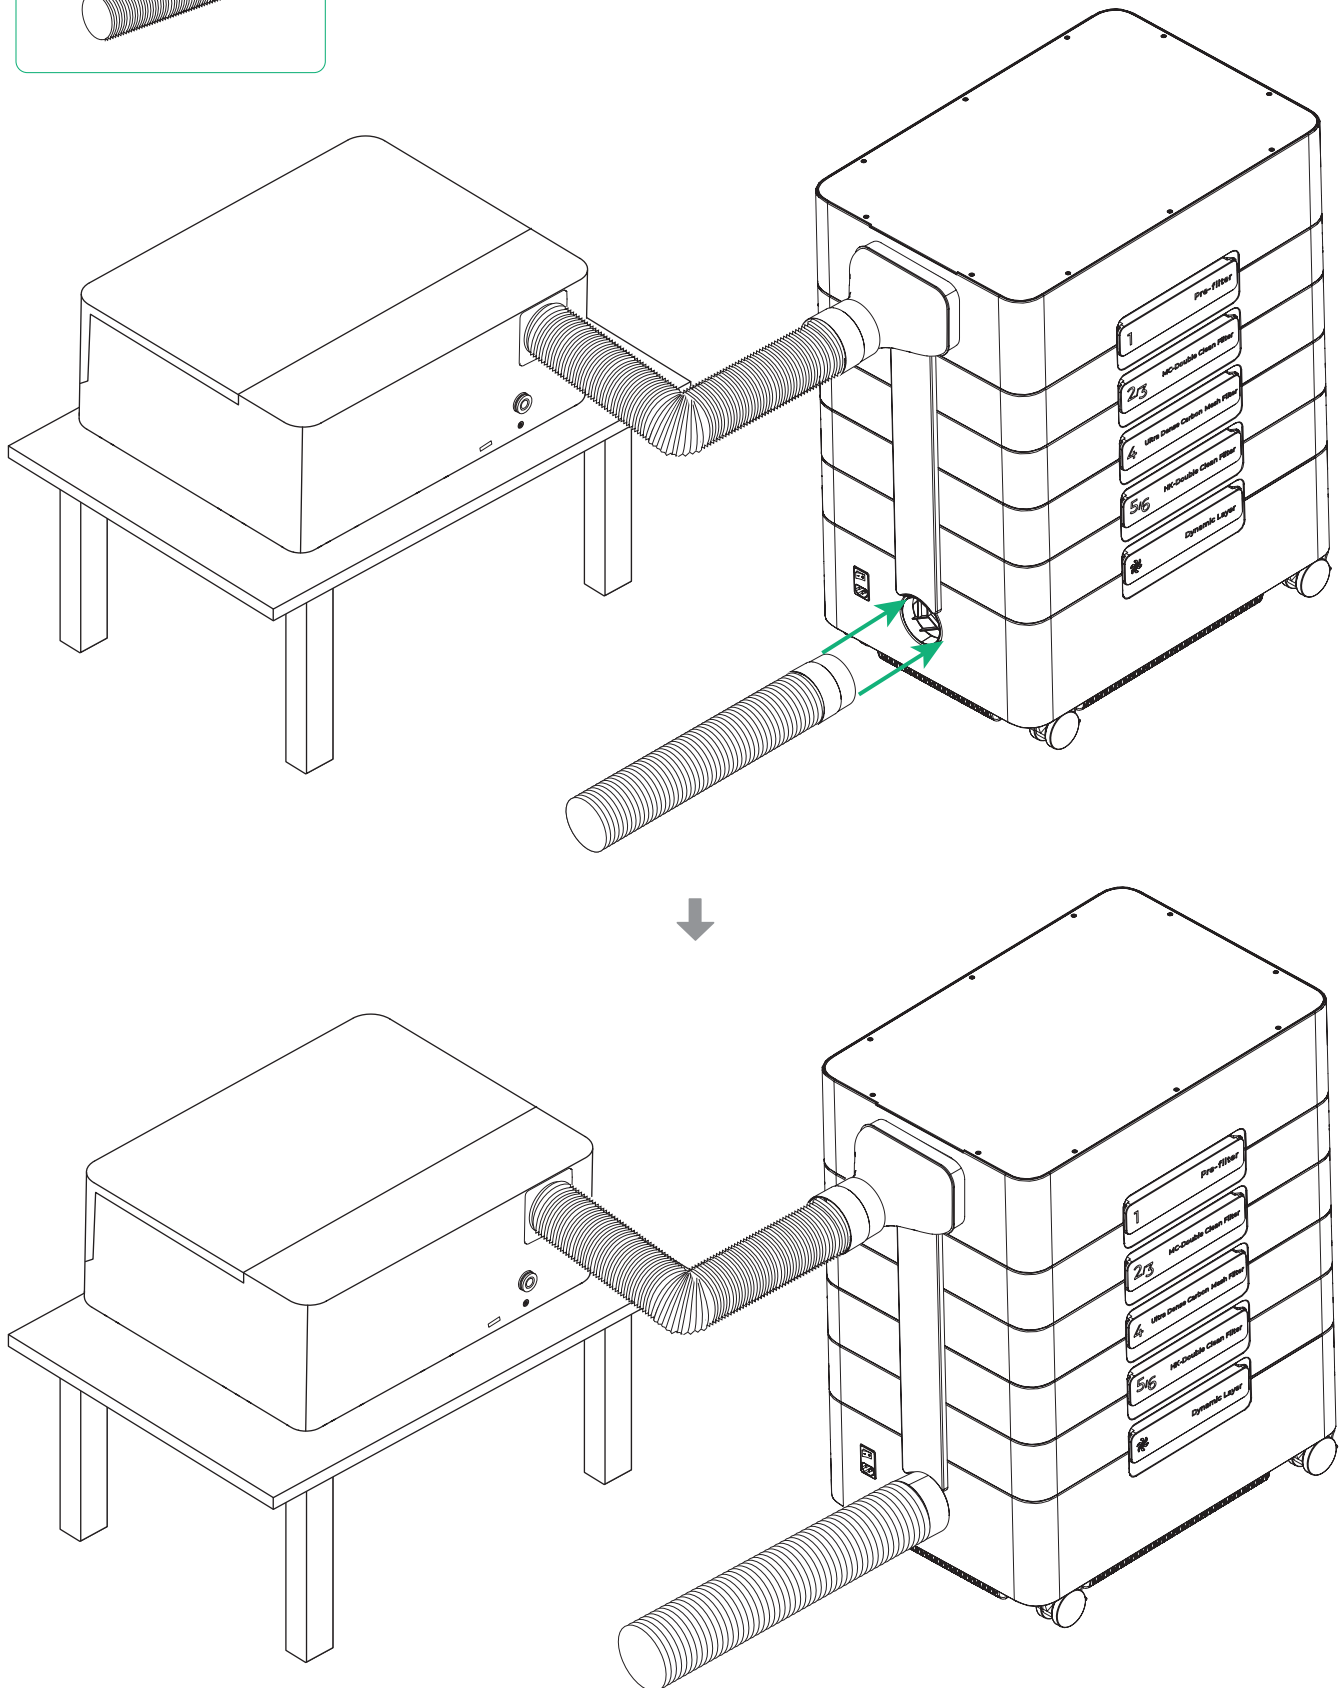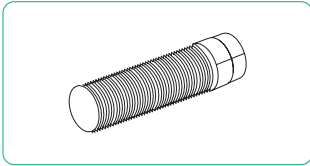


6 Connect AP2 Max to the power supply

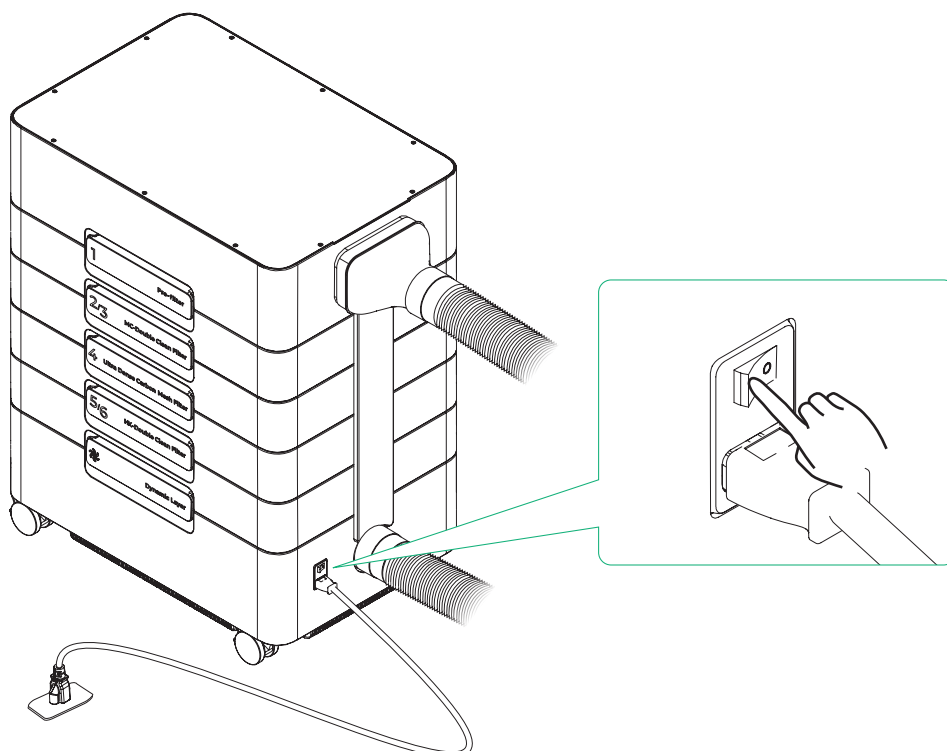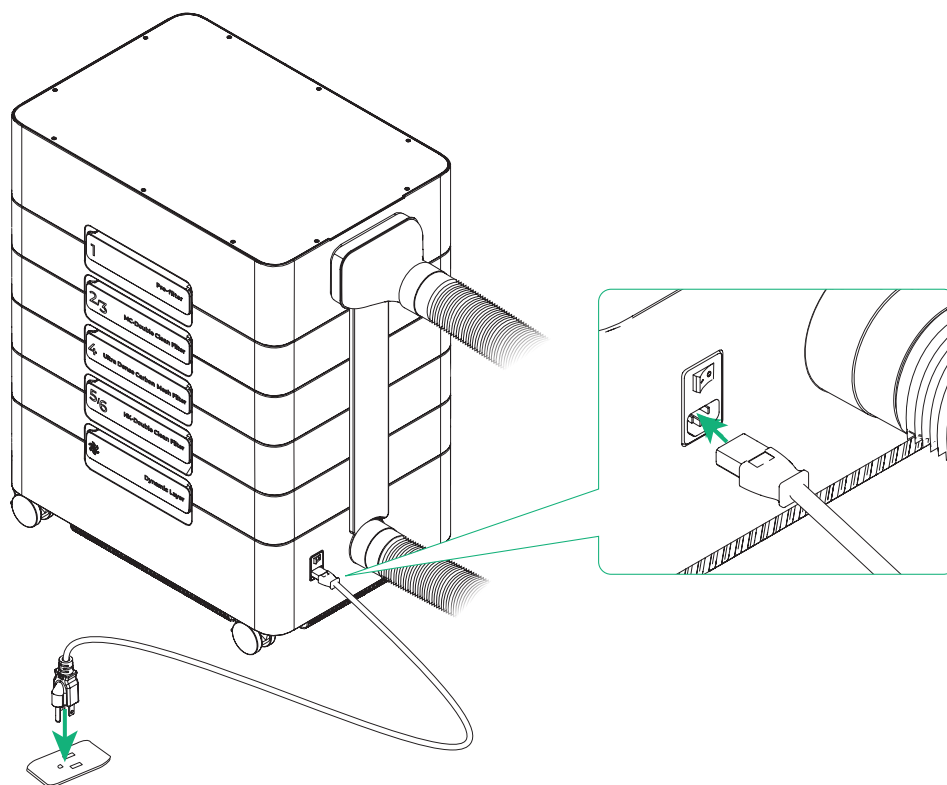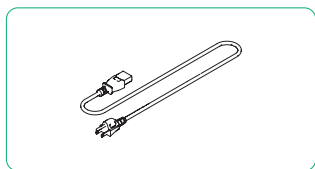   

7 Set up wireless connection



 
- AP2 Max can establish a wireless connection only with xTool laser devices that support Bluetooth.
- When you use AP2 Max with a laser device that has a built-in Bluetooth chipset, you do not need to connect the Bluetooth dongle. You can set up the connection through the xTool software.

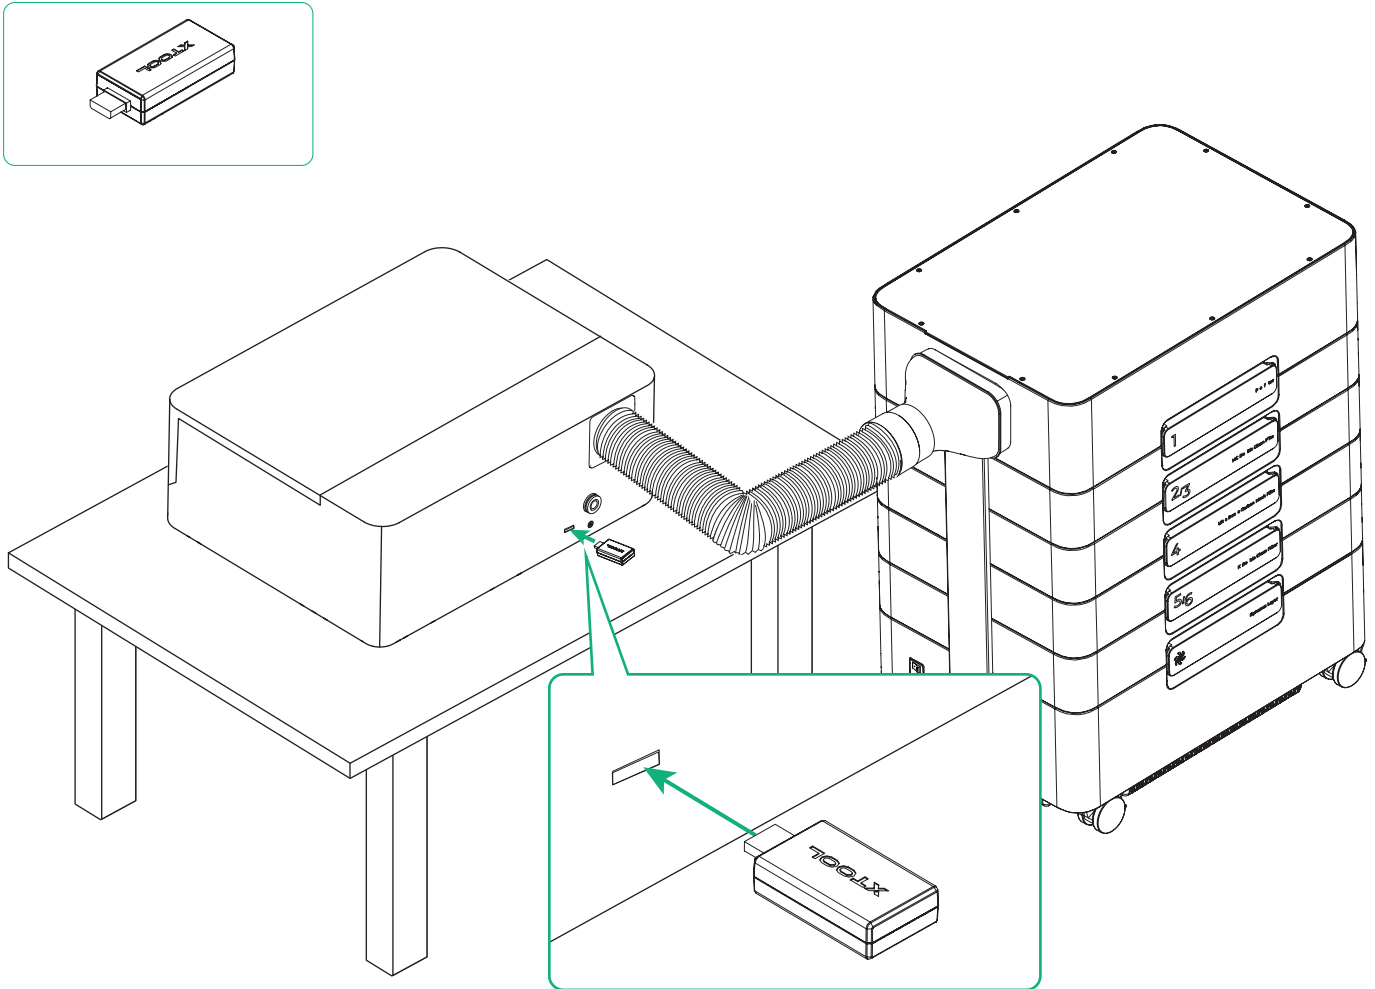


- Insert the Bluetooth dongle to the extension port of the xTool device. The preceding figure is for reference only.
- After the Bluetooth dongle is connected, AP2 Max automatically establishes a connection with the xTool device, and its information is displayed on the device settings page on the xTool software. For more details, see "Use with xTool software."
- If another Bluetooth dongle has been inserted to the device or you need to pair again, press and hold the AP2 Max's power button for at least five seconds. The Bluetooth status indicator will blink white, indicating that AP2 Max is in pairing mode.

Use xTool SafetyPro™ AP2 Max

 1 Turn on the remote control.

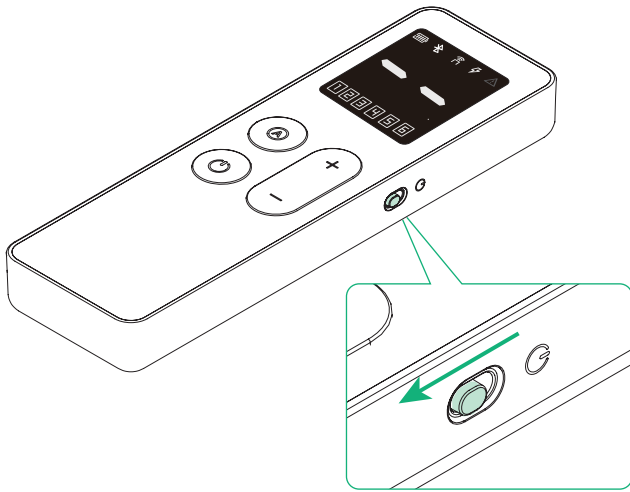


2 Turn on AP2 Max.

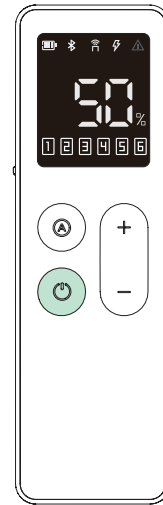 


3 Select a mode.

 Auto mode

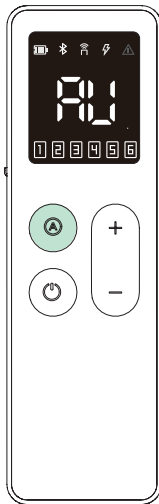

This mode is applicable only to xTool laser devices with Bluetooth functionality. In this mode, AP2 Max automatically adjusts the airflow volume based on the material being processed.

 Manual mode

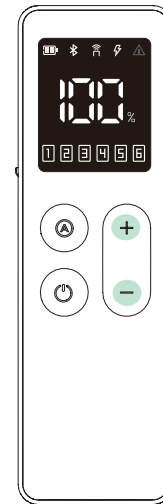

Press the airflow increase button or airflow decrease button to manually adjust the airflow.

+

Each press increases the airflow by 1%. Pressing and holding for at least 1 second can increase continuously.

-

Each press reduces the airflow by 1%. Pressing and holding for at least 1 second can reduce continuously.

Reconnect the remote control

 


You need to reconnect the remote control if the remote control disconnects from AP2 Max, or another remote control or AP2 Max needs to be connected.

Procedure: Concurrently press the auto mode button of both the remote control and AP2 Max for at least 5s until the 2.4G connection indicator blinks, and ensure that the remote control is close to AP2 Max. The remote control will connect to AP2 Max automatically.

Use with xTool software

1 Get xTool software

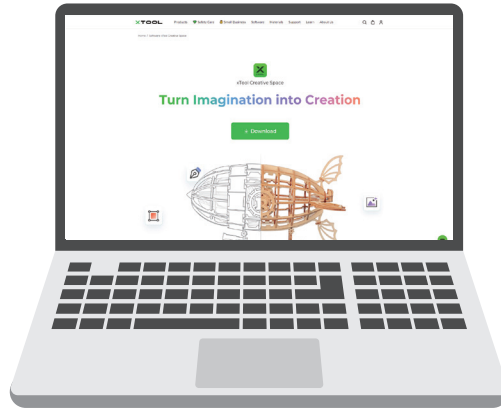

Visit s.xtool.com/software to get xTool software.

2 Use xTool SafetyPro™ AP2 Max on xTool software

Visit support.xtool.com/article/2097

Maintenance

Replace the filters

When a filter is reaching its end of life, the xTool software prompts you to purchase a new one for replacement. For steps about how to replace a filter, see “Install the filters.”



You must disconnect the power cable before replacing any filter.

Clean the cyclone

Generally, you need to clean the cyclone every 3 to 6 months.

 
 


You must disconnect the power cable before cleaning the cyclone.


(I) Take the cyclone down

1. Disconnect power.


2. Remove the exhaust pipe.

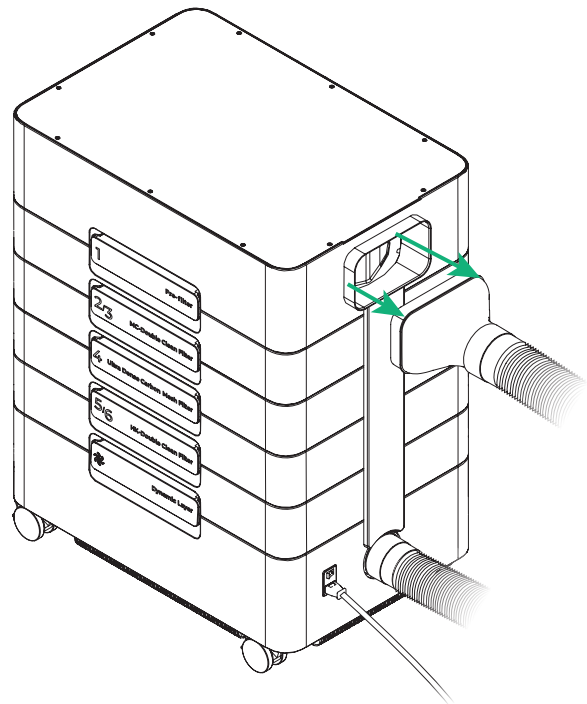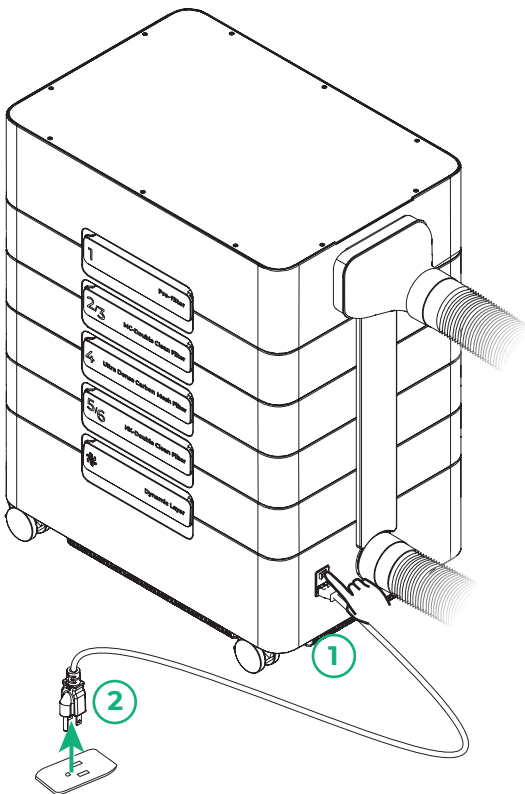

 
3. Remove the NFC baseplate.

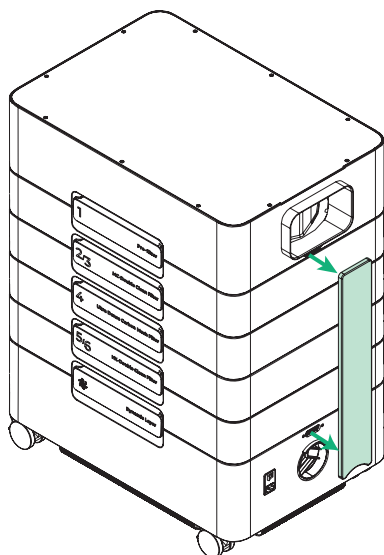

 4. Release draw latches on both sides to unlock them.

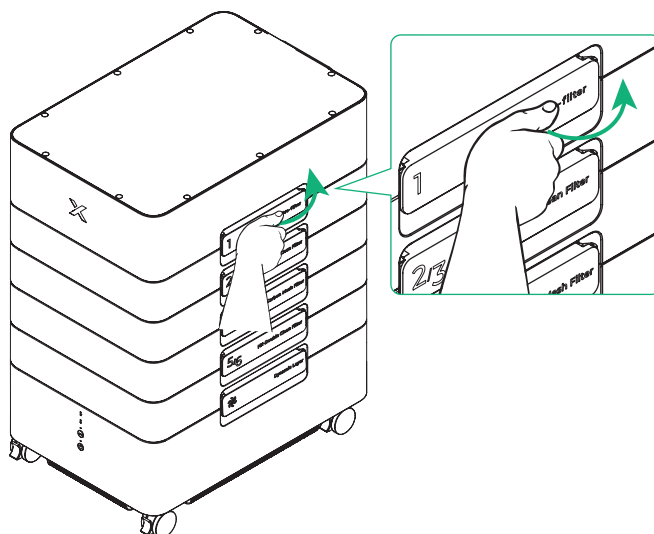


 5. Take the cyclone down.

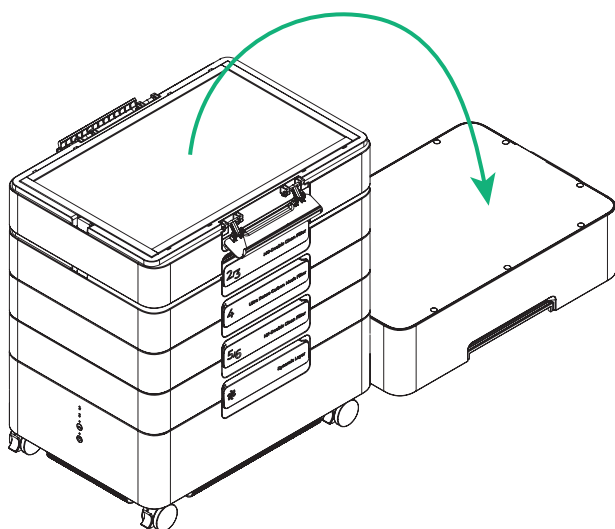


(2) Disassemble the cyclone

 
1. Remove the screws.



not included
in packaging

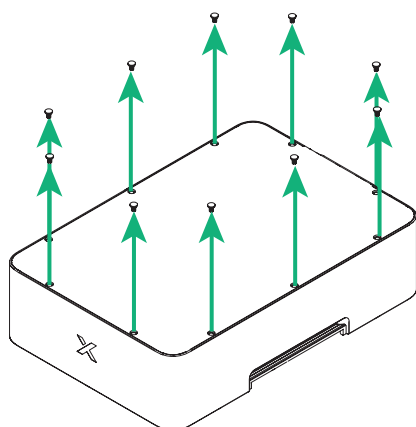 


 2. Take the cyclone components out.

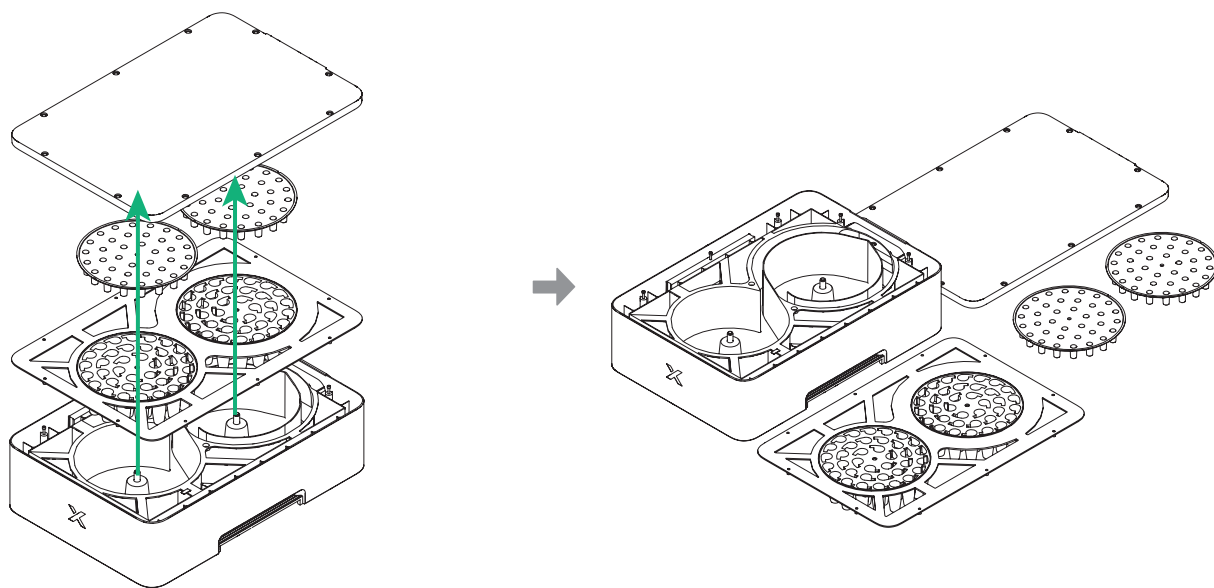


(3) Clean the cyclone

 
1. Pour out accumulated dust and debris.

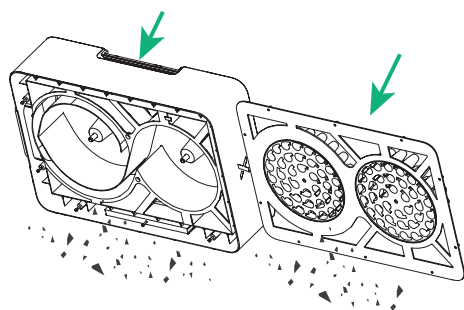

 2. Spray with degreaser.

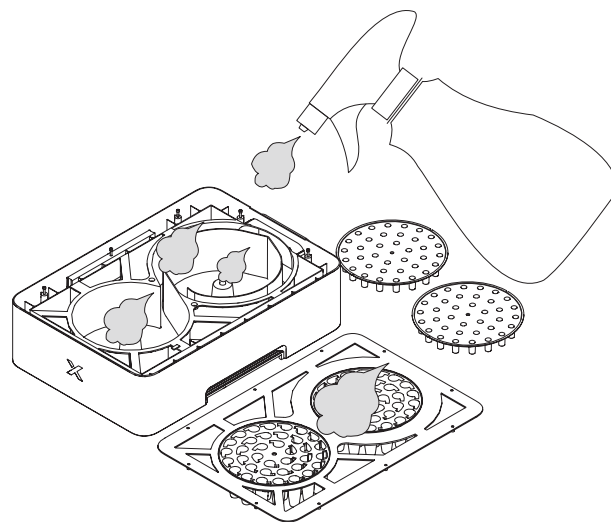

 
3. Wash with running water.

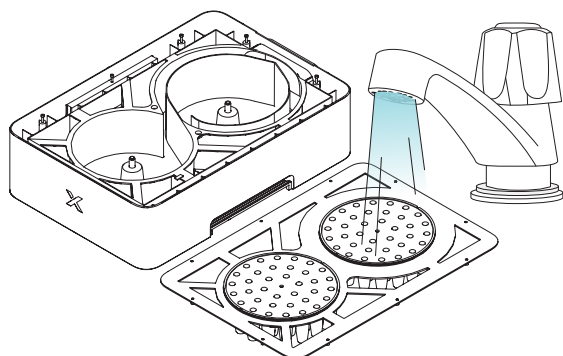


(4) Install the cyclone back

When the cyclone components are dry, install them back in place.

 
1. Reinstall the components in the order as illustrated.

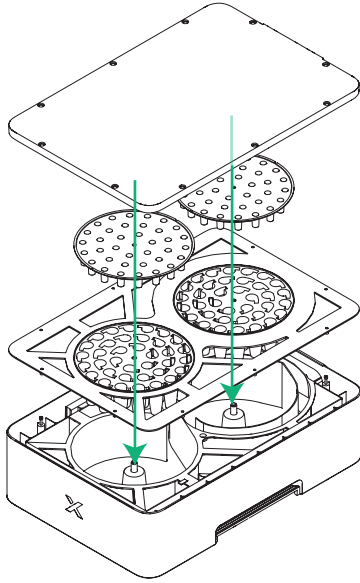

 
2. Install the screws.

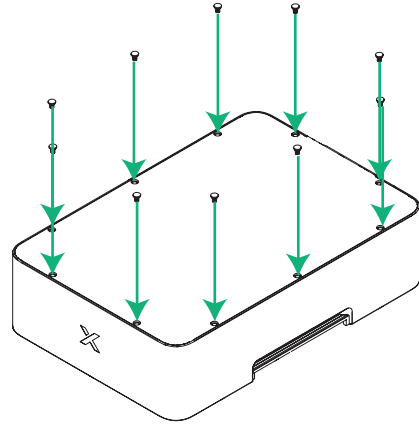

 3. Reinstall the cyclone and lock the draw latches.

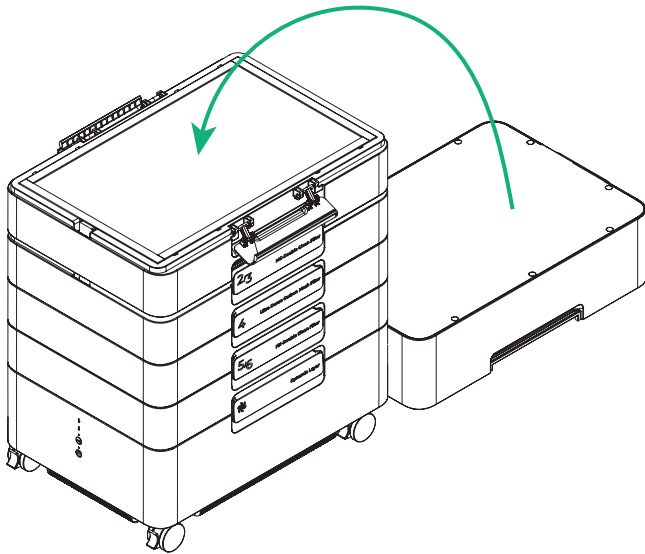

 4. Reinstall the NFC baseplate.

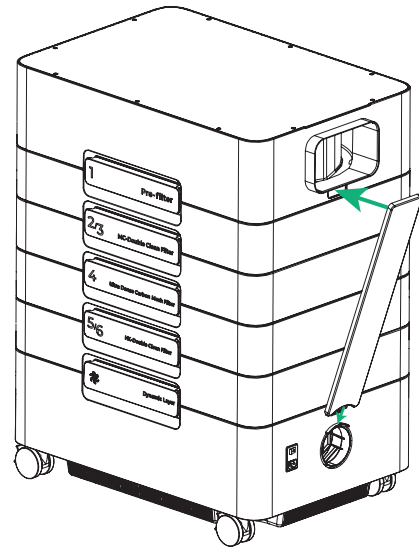

XTOOL